


# ULTRA-BARRIER®

Patent No. 4,328,955


## INSTALLATION GUIDE

Unlimited applications for fences, window bars, window sills, building roof edges, electrical towers, equipment and more!


Fence fabric should extend approximately 1 inch above top railing, unless Ultra-Barrier is being mounted directly on round or rectangular top rail.

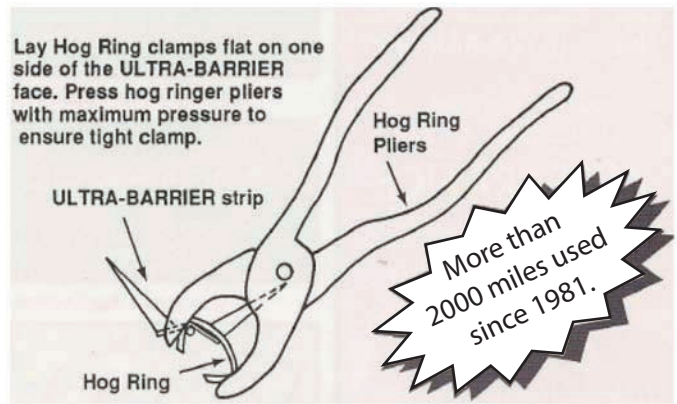


Position loaded Hog Ring Pliers around fence fabric and Ultra-Barrier. Compress pliers until Hog Ring is firmly seated.

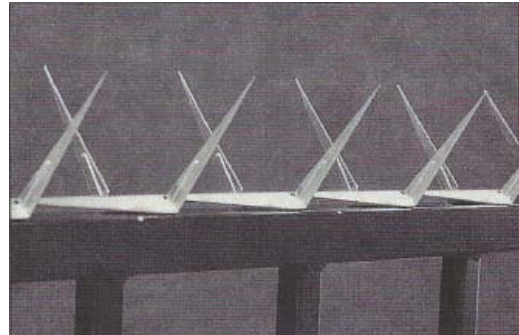


On square or round tube railings use self drilling Phillips head screws. Please observe proper angle. One blade should be straight up and one blade facing public access should be approximately 45 degrees.

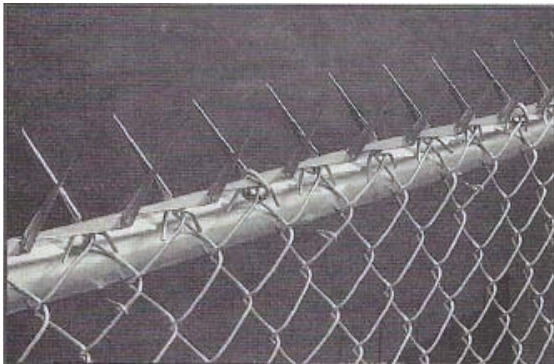


Ultra-Barrier installed on fence fabric.

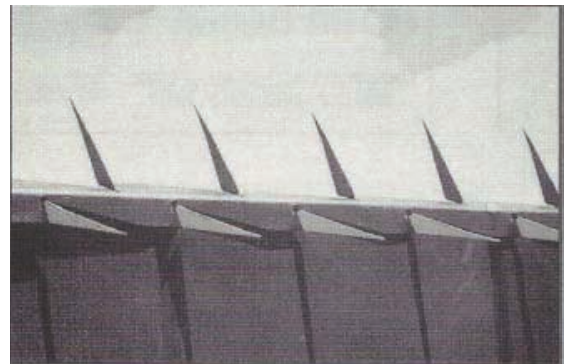

On wooden fences galvanized nails may be used to mount Ultra-Barrier strips.

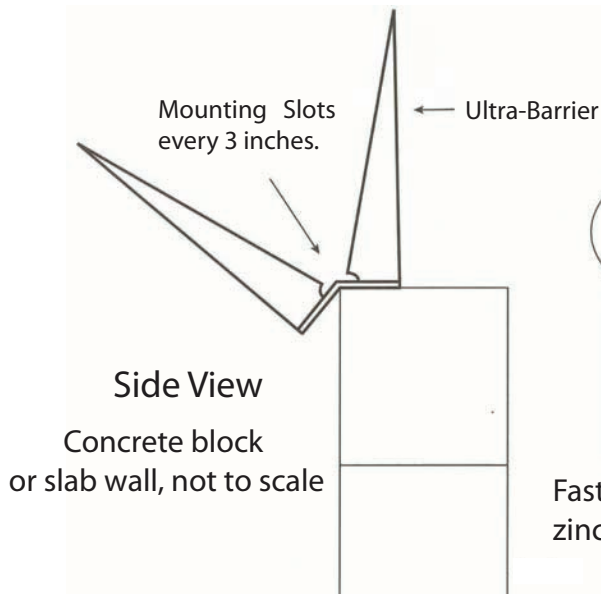

On concrete or brick walls, slightly flatten corner every 24 inches with hammer, enough that the grill will not slip. Drill anchor holes at 45 degrees, using a wood template to precisely position hole locations.

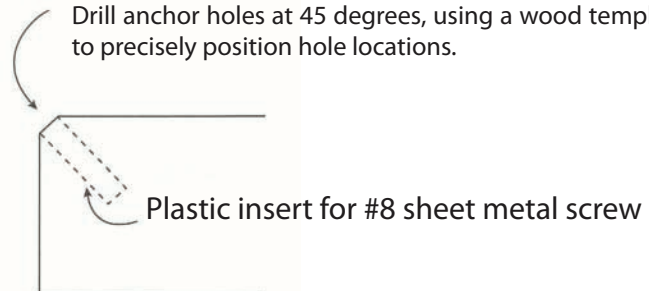

Fasten Ultra-Barrier every 24 inches with a sheet metal, zinc chromate screw. Pan Head #8 x 1 inch long